


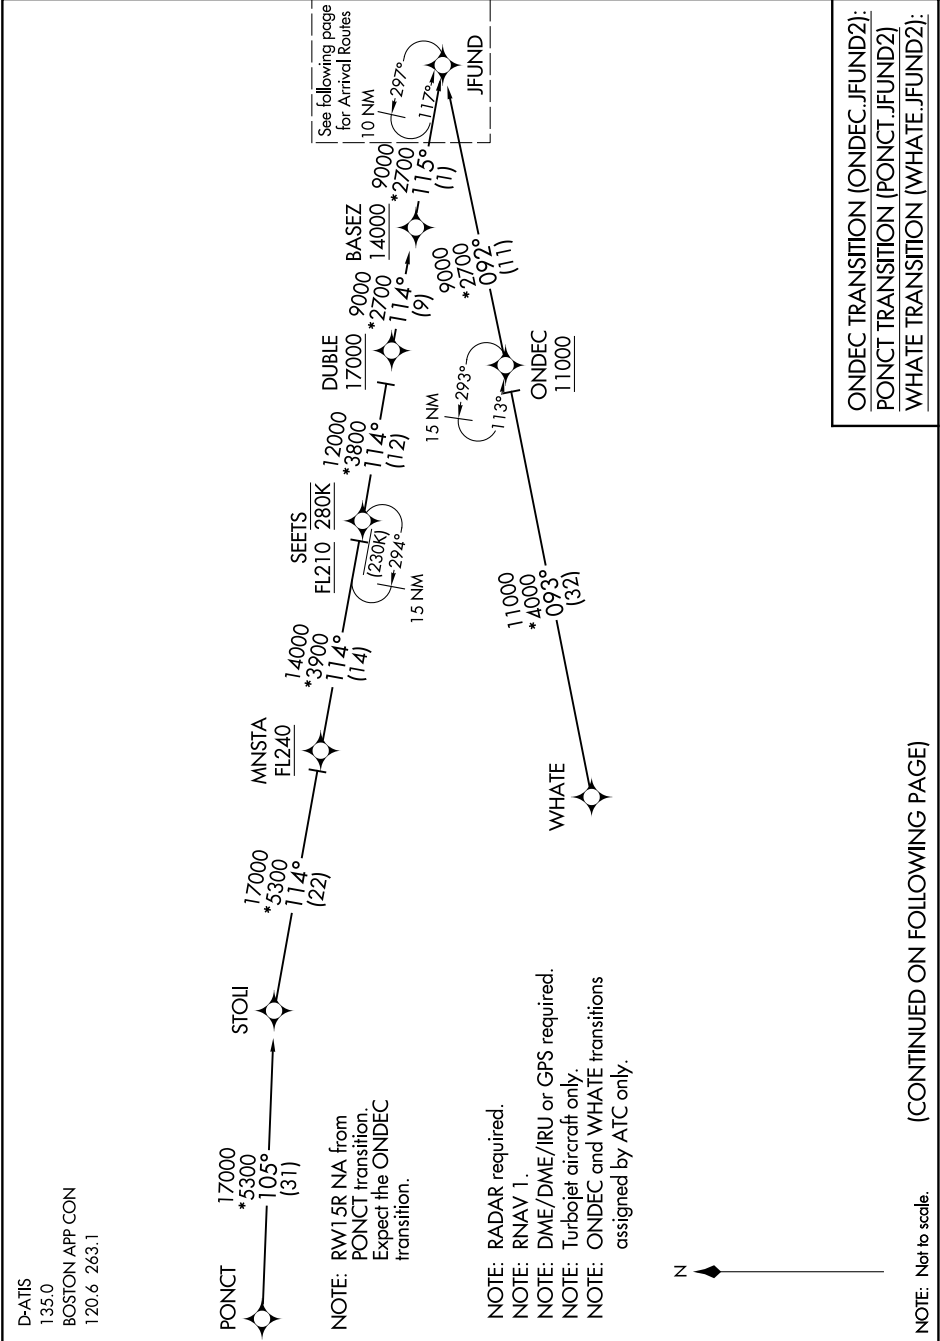

ONDEC

11000

*4000

093°

(32)

WHATE

11000

*4000

093°

(32)

JFUND

10 NM

297°

117°

115°

092°

(11)

NOTE: RW15R NA from
PONCT transition.
Expect the ONDEC
transition.

NOTE: RADAR required.
NOTE: RNAV 1.
NOTE: DME/DME/IRU or GPS required.
NOTE: Turbojet aircraft only.
NOTE: ONDEC and WHATE transitions
assigned by ATC only.

See following page
for Arrival Routes

10 NM

297°

117°

115°

092°

(11)

ONDEC TRANSITION (ONDEC.JFUND2):
PONCT TRANSITION (PONCT.JFUND2)
WHATE TRANSITION (WHATE.JFUND2):

NOTE: Not to scale.

(CONTINUED ON FOLLOWING PAGE)

N

→

NE-1, 17 APR 2025 to 15 MAY 2025

NE-1, 17 APR 2025 to 15 MAY 2025