


LOC/DME I-OGS	APP CRS	Rwy Idg	6035
110.7	269°	TDZE	302
Chan 44		Apt Elev	302

LOC RWY 27


OGDENSBURG INTL (OGS)

ADF required.	MALSF	MISSED APPROACH: Climbing left turn to 2000 direct OGIVE LOM and hold.
VDP NA when using Massena altimeter setting. When local altimeter setting not received, use Massena altimeter setting and increase all MDA 100 feet and S-LOC 27 and Circling visibility Cat C/D ¼ SM. NA		

AWOS-3	BOSTON CENTER	UNICOM
118.525	135.25 377.1	122.8 (CTAF) 0

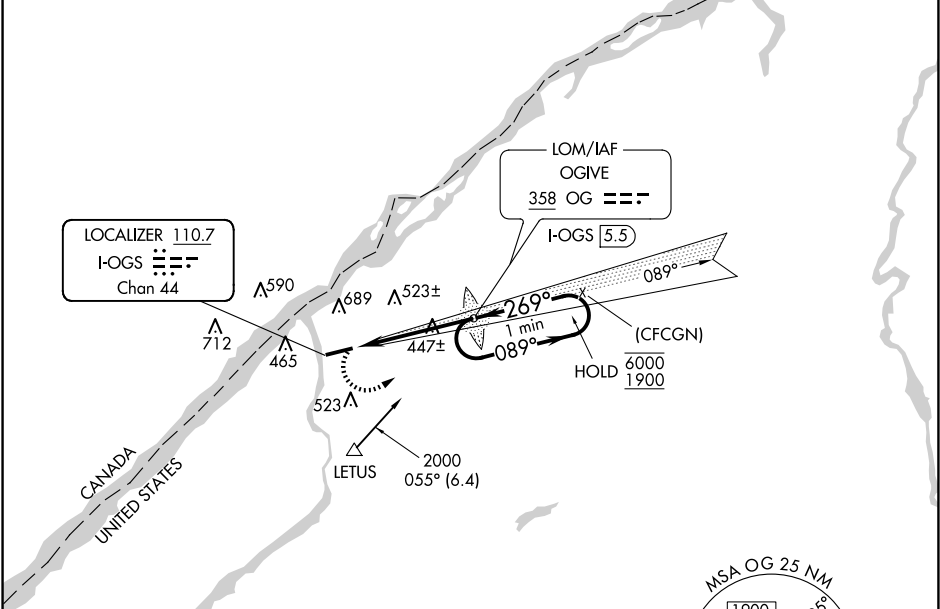

ELEV 302	TDZE 302
----------	----------

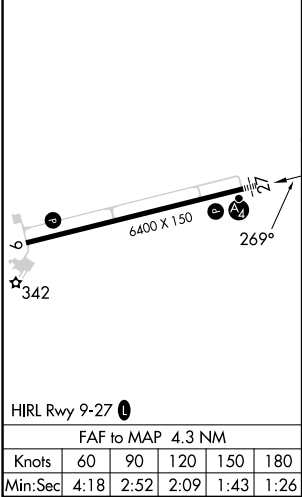

2000	OG	VGSI and descent angles not coincident (VGSI Angle 3.00/TCH 45).	OG LOM	One Minute Holding Pattern
			I-OGS 5.5	
			I-OGS 2.4	
			I-OGS 1.2	
			269°	
			089°	
			1900	
			6000	
			1900	
			3.38°	
			TCH 45	
			1.2	
			3.1 NM	
CATEGORY	A	B	C	D
S-27	740-1	438 (500-1)	740-1¼	438 (500-1¼)
CIRCLING	760-1	1000-1	1000-2	1000-2¼
	458 (500-1)	698 (700-1)	698 (700-2)	698 (700-2¼)