

COPTER ILS or LOC/DME RWY 13
ATLANTIC CITY INTL (ACY)

MISSED APPROACH: Climb to 600 then climbing left turn to 2000 via ACY R-090 to SMITS INT/ACY 11 DME and hold.

Diagram illustrating the navigation aids and obstructions for the Atlantic City VOR/DME station.

Obstructions:

- R-5002C
- R-5002A
- R-5002B
- R-5002E

Navigation Aids:


- ATLANTIC CITY**
117.15 ACY
Chan 118 (Y)
- LOCALIZER 109.1**
I-PVO
Chan 28
- TESKE**
I-PVO [2.9]
- MAYBN**
I-PVO [4.4]
RADAR
- SMITS**
ACY [11]

Channels and Frequencies:

- 115.2 VCN Chan 99
- 113.4 CN Chan 81
- 117.15 ACY Chan 118 (Y)
- 113.4 CYN Chan 81
- 115.2 VCN Chan 99
- 117.15 ACY Chan 118 (Y)
- 113.4 CYN Chan 81


Bearings and Distances:

- 308°
- 128° (1.5)
- 161±
- 150±
- 281
- 294
- 245
- 212±
- 319
- 1040
- 90°
- 270°
- 106°
- 286°

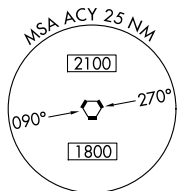

RADAR REQUIRED

Use I-PVO DME when on the localizer course.

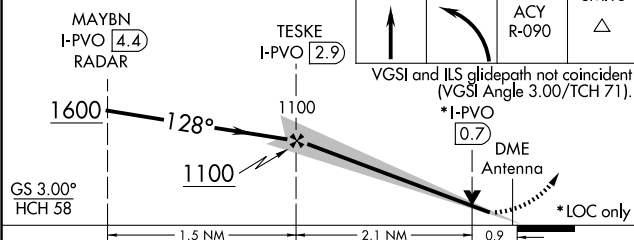39°27'N-74°35'W

°27'N-74°35'W ATLANTIC CITY INTL (ACY)
COPTER ILS or LOC/DME RWY 13