

LOC/DME I-CAE
110.3
Chan **40**

APP CRS
112°

Rwy Idg **8601**
TDZE **236**
Apt Elev **236**

ILS or LOC RWY 11
COLUMBIA METRO (CAE)


DME or RADAR required for LOC only.

▼ For inop ALS, increase S-ILS 11 Cat E visibility to RVR 4000, S-LOC 11 Cats C/D/E visibility to 1½ SM, and BEHRN Minimums S-LOC 11 Cat E visibility to 1¾ SM.

ALSF-2

MISSED APPROACH: Climb to 1100 then climbing right turn to 2300 direct CAE VORTAC and hold, continue climb-in-hold to 2300. (TACAN aircraft confine on CAE VORTAC R-140 to ADCOM INT/CAE VORTAC 10 DME and hold NW, right turn, 140° inbound)

ATIS 120.15	COLUMBIA APP CON 133.4 285.6 (290°-109°) 124.15 338.2 (110°-289°)	COLUMBIA TOWER 119.5 257.8	GND CON 121.9 348.6	CLNC DEL 119.75
-----------------------	---	--------------------------------------	-------------------------------	---------------------------

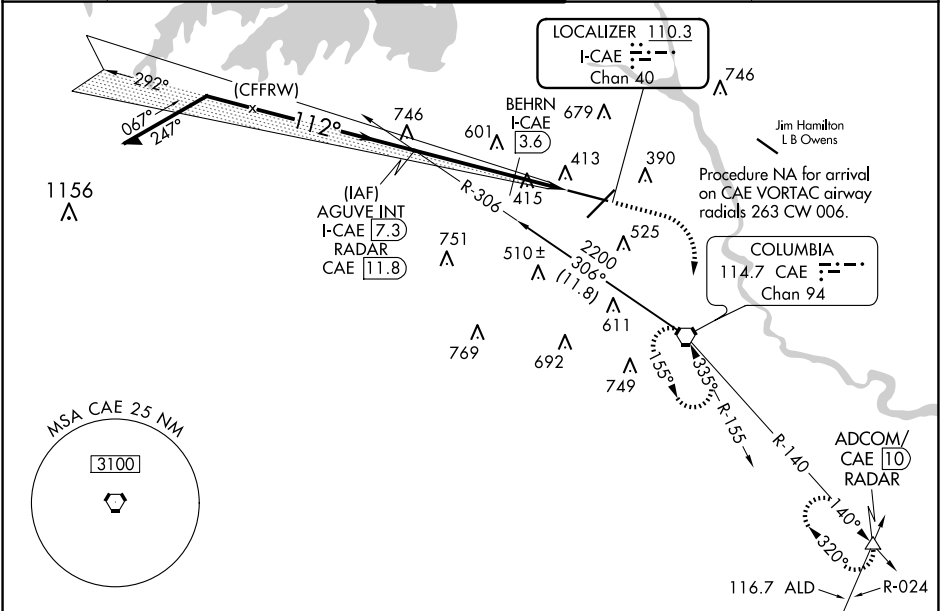

AGUVE INT
I-CAE **7.3**
RADAR

Remain within 1.5 NM

2200
GS 3.00°
TCH 59

292°
112°
2100
Use I-CAE DME when on the localizer course.

2100
900

BEHRN
I-CAE **3.6**

I-CAE **2.8**

I-CAE **1.6**

3.7 NM
0.8 NM
1.2 NM

ELEV **236**

TDZE **236**

396

TWR **354**

8601 X 150

800 X 150

112°

REIL Rwy 23
TDZ/CL Rwy 11
HIRL Rlys 5-23 and 11-29

FAF to MAP 5.7 NM

Knots

60

90

120

150

180

Min:Sec

5:42

3:48

2:51

2:17

1:54

CATEGORY	A	B	C	D	E		
S-ILS 11	436/18 200 (200-½)						
S-LOC 11	900/24 664 (700-½)	900-1½ 664 (700-½)					
CIRCLING	900-1 664 (700-1)	1040-2¼ 804 (900-2¼)	1040-2½ 804 (900-2½)	1040-2¾ 804 (900-2¾)			
BEHRN MINIMUMS (DME REQUIRED)							
S-LOC 11	680/24 444 (500-½)	680/45 444 (500-¾)					
CIRCLING	740-1 504 (600-1)	860-1 624 (700-1)	1040-2¼ 804 (900-2¼)	1040-2½ 804 (900-2½)	1040-2¾ 804 (900-2¾)		

COLUMBIA, SOUTH CAROLINA
Amdt 16 24MAR22

33°56'N-81°07'W

COLUMBIA METRO (CAE)
ILS or LOC RWY 11